




Automation Screen

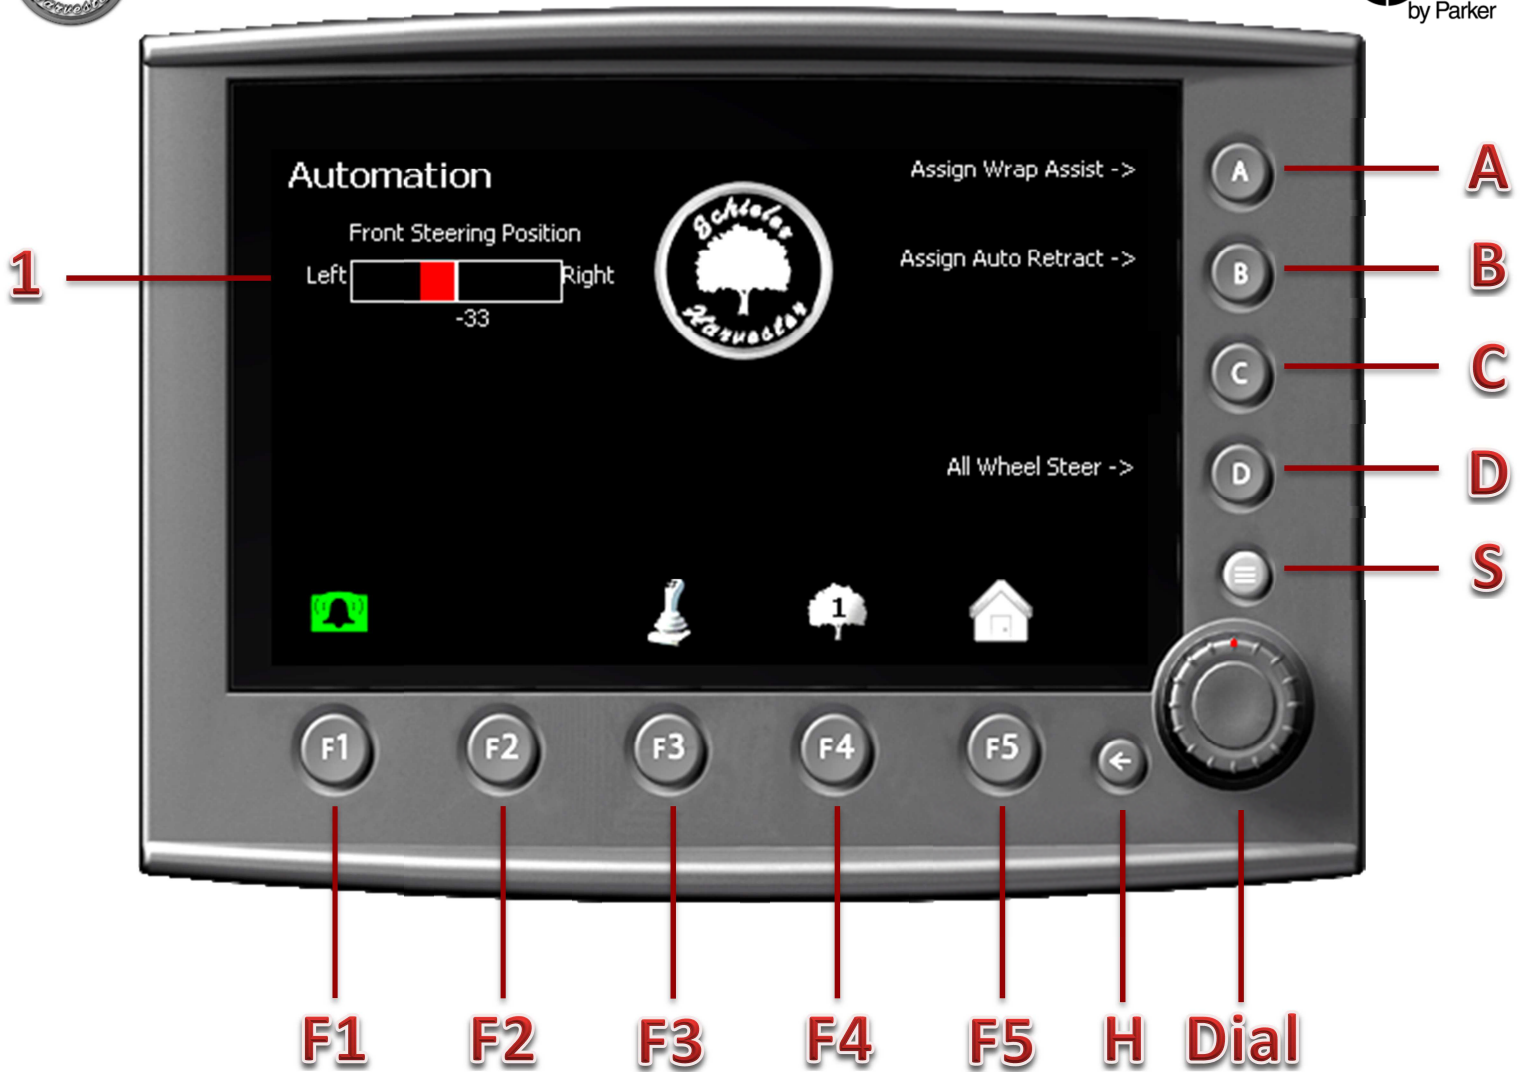

Controls

- F1) Enable/Disable **Bin Full Audio Alarm**
- F2) Unused
- F3) Go to the **Controls Screen**
- F4) Go to the **Yield Info Screen**
- F5) Return to the **Home Screen**
- H) Return to the **Home Screen** (Same as F5)
- S) Go to the **Settings Screen**
- A) Enable/Disable **Wrap Assist**
If Enabled: When you tap the **Wrap** button, the harvester will automatically complete the wrap sequence, until the tree is fully wrapped.

- B) Enable/Disable **Auto Retract**
If Enabled: When you tap the **Unwrap** button, the harvester will automatically complete the unwrap sequence and slide the catching frame all the way in.
- C) Unused
- D) Enable/Disable **All Wheel Steering**
If Enabled: Rear wheels will mirror the orientation of the front wheels, automatically.
- Dial) Unused

Status

1) **Front Steering Position**

- Displays the orientation of front wheels to visually assist with steering

Functions

A) **Wrap Assist**

- When the **Brake** is applied, **Unwrap**, or **In** or **Out** is activated at the joystick, the automation will disable, instantly. The next time the **Wrap** button is tapped, at the next tree, the automation will resume.
- Adjustments to the timing of the **Wrap Assist** sequence can be made in the **Settings Screen**.

B) **Auto Retract**

- When the **Brake** is applied, **Wrap**, or **In** or **Out** is activated at the joystick, the automation will disable, instantly. The next time the **Unwrap** button is tapped, at the next tree, the automation will resume.
- Adjustments to the timing of the **Auto Retract** sequence can be made in the **Settings Screen**.