




# Engine Screen

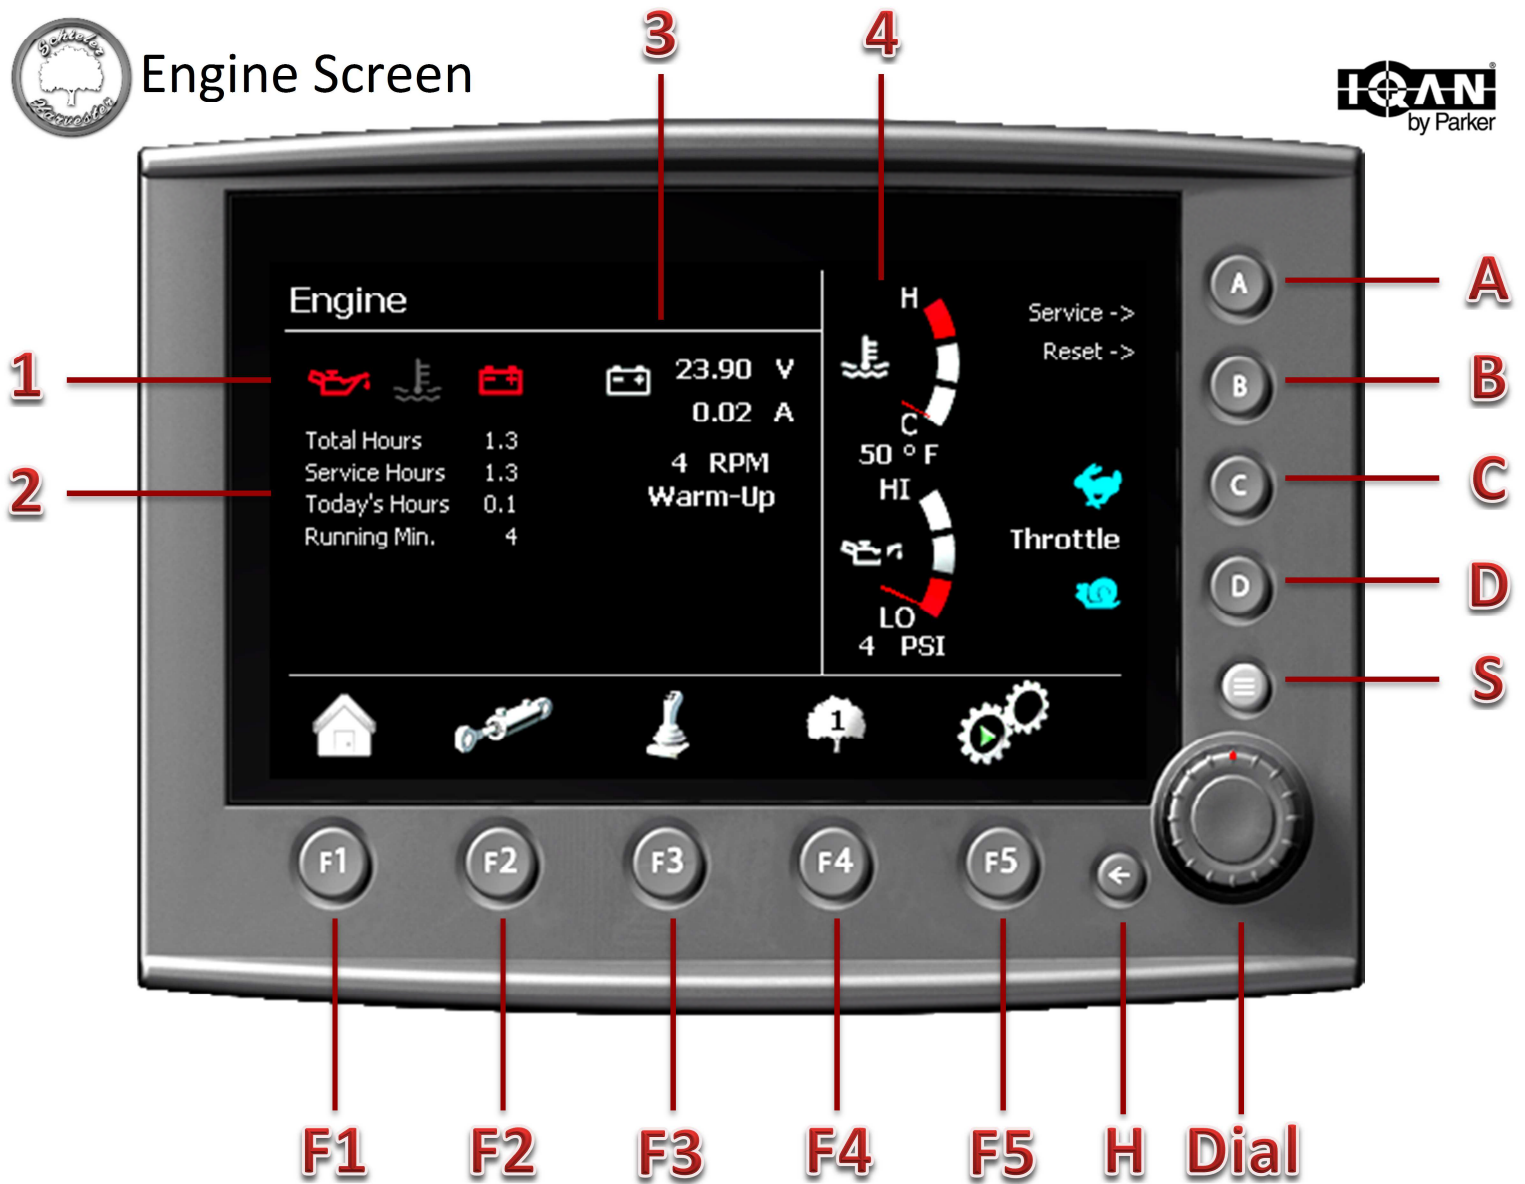

## Controls

- F1) Return to the **Home Screen**
- F2) Go to the **Hydraulics Screen**
- F3) Go to the **Controls Screen**
- F4) Go to the **Yield Info Screen**
- F5) Go to the **Automation Screen**
- H) Return to the **Home Screen** (same as F1)

- S) Go to the **Settings Screen**
- A|B) Push simultaneously to reset **Service Hours**
- C) Increase **Throttle**
- D) Decrease **Throttle**
- Dial) Unused

## Status

- 1) **Warning Lights** – Will indicate when an unsafe limit is reached
- 2) **Engine Hour Totals**
  - **Total Hours** – Total running hours of the life of the harvester
  - **Service Hours** – Running hours since last service (must be manually reset from this screen)
  - **Today's Hours** – Running hours since 12AM of today
  - **Running Min** – Minutes the engine has been running since last engine start
- 3) **Voltage, Amperage, and Engine RPM**
  - Below the Engine RPM is the **Auto Throttle** position; **Idle, Warm-Up, or Full**
- 4) **Engine Temp and Pressure**
  - **Engine Water Temp** (Safe range is 0 to 190)
  - **Engine Oil Pressure** (Safe range is 40 to 70)