




# Hydraulics Screen

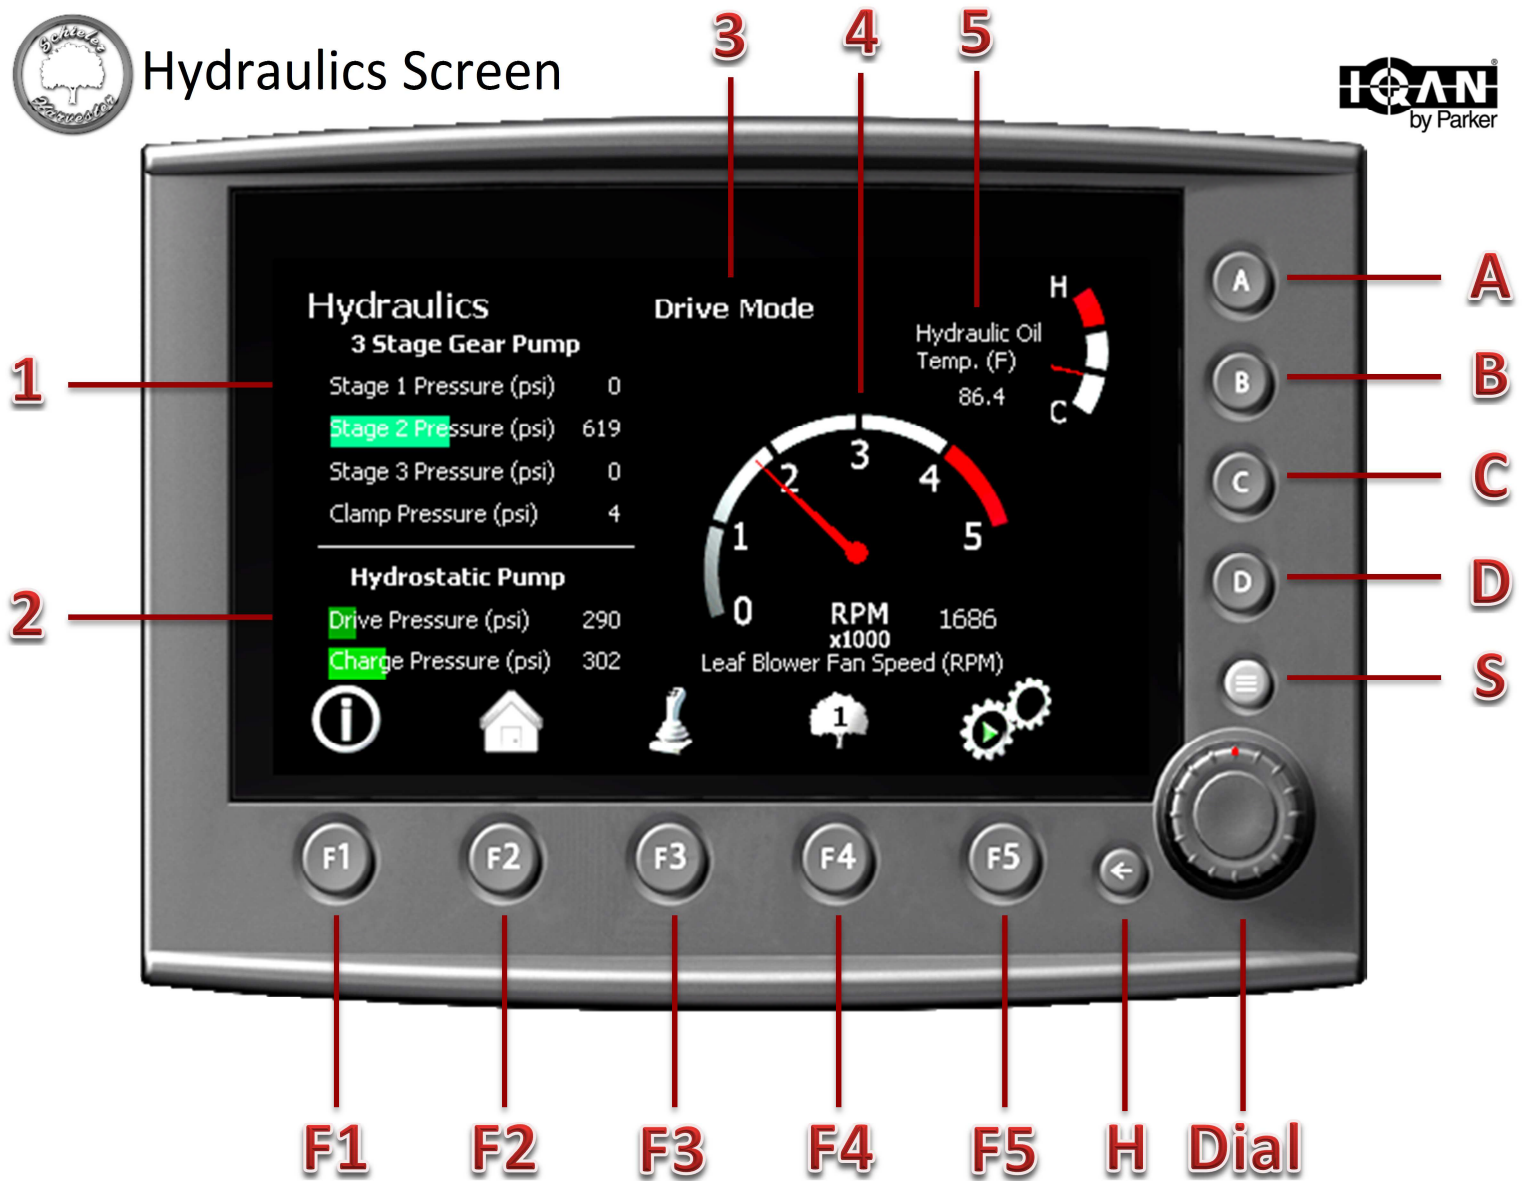

## Controls

- |  |              |
|--|--------------|
| F1) Go to the <b>Internal Diagnostics Screen</b> | A) Unused    |
| F2) Return to the <b>Home Screen</b>             | B) Unused    |
| F3) Go to the <b>Controls Screen</b>             | C) Unused    |
| F4) Go to the <b>Yield Info Screen</b>           | D) Unused    |
| F5) Go to the <b>Automation Screen</b>           | Dial) Unused |
| H) Return to the <b>Home Screen (Same as F1)</b> |              |
| S) Go to the <b>Settings Screen</b>              |              |

# Status

## 1) **3 Stage Gear Pump Pressures**

- **Stage 1** (Safe range is 0 to 2000)
  - Stage includes **In/Out & Up/Down**
- **Stage 2** (Safe range is 0 to 2000)
  - Stage includes **Wrap/Unwrap**
- **Stage 3** (Safe range is 0 to 2000)
  - Stage includes **Conveyors, Bin Track, & Steering**
- **Clamp** (Safe range is 0 to 1500)

## 2) **Hydrostatic Pump Pressures**

- **Drive/Shake** (Safe range is 0 to 2500)
- **Charge Pressure** (Safe range is 150 to 350)

## 3) **Drive/Shake Mode Indication**

## 4) **Leaf Blower Fan Speed** (Safe range is 700 to 2000 at full throttle)

- Fan should always register a reasonable RPM to keep hydraulic oil cool

## 5) **Hydraulic Oil Temp** (Safe range is 0 to 190)